


P60ZLW

Waterproof IP65 LED 8*60w Zoom Par

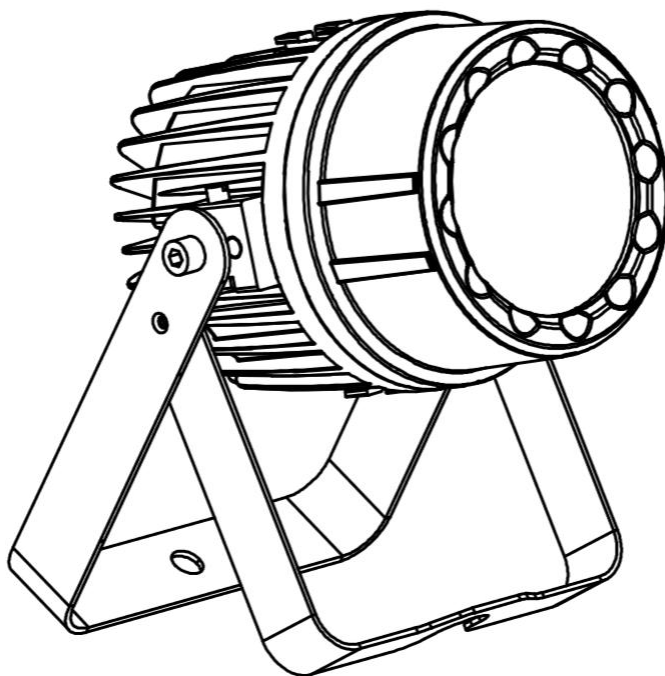

User manual

Please read the instructions carefully before use

TABLE OF CONTENTS

1. Safety Instructions	3-4
2. Technical Specifications	5
3. LUX Date	6
4. How To Control The Unit	7-9
5. Control Box information.....	10
6. DMX Channel List.....	11-25
7. Shape.....	25-26
8. Trouble shooting	26-27
9. Fixture Cleaning	28

statement

The product has well capability and intact packing when leave factory. All of the user should comply with warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can't be responsible for any malfunction & problem owing to ignore the manual.

1. Safety Instructions

Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.

- Unpack and check carefully there is no transportation damage before using the unit.
- Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- The unit is for indoor use only. Use only in a dry location.
- The unit must be installed in a location with adequate ventilation, at least 50 cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Disconnect main power before replacement or servicing.

- Make sure there are no flammable materials close to the unit while operating as it is fire hazard.
- Use safety cable when fixes this unit. Do not handle the unit by taking its head only, but always by taking its base.

- Maximum ambient temperature is T_a : 40°C. Do not operate it where the temperature is higher than this Unit surface temperature may reach up to 85°C. Do not touch the housing bare-hand during its operation. Turn off the power and allow about 15 minutes for the unit to cool down before replacing or serving.

- the event of serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest

authorized technical assistance center. Always use the same type spare parts.

- Do not touch any wire during operation as high voltage might be causing electric shock.

Warning:

- To prevent or reduce the risk of electrical shock or fire, do not expose the unit to rain or moisture.
- Do not open the unit within five minutes after switching off.
- The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.

Caution:

There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please contact your nearest dealer.

Installation:

The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. And make sure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the unit's weight. Also always use a safety cable that can hold 12 times of the weight of the unit when installing the fixture.

The equipment must be fixed by professionals. And it must be fixed at a place where is out of the touch of people.

2. Technical Specifications

Light Sources: 8*60W RGBW 4-in-1 LED

Beam Angle: 3.5° - 45°

Power Consumption: 500w

Power Voltage: AC 100-240V, 50/60Hz

Control box weight: 2.55kgs

Single lamp holder weight: 1.88kgs

Single lamp holder with hanger weight: 2.55kg

Single lamp head size: 181x140x140mm

Control

DMX Channel: 23/28/42/50/56 Channels

Control Modes: DMX512/master-Slave/Auto Run/Music/Manual/RDM

Construction

Data In socket: waterproof 5-pin XLR sockets (24V power + signal line)

The control box: PowerCon in/out 3-pin

Protection Rating: IP65

Features

1>LED single control

2>One control box (not waterproof) controls eight belts for focusing, which can be connected in series at 230V, and 2 units can be connected in series at 120V.

3>A control box (not waterproof) controls eight 60W4in1 die-casting heads with focus and waterproof, supporting point control, can be installed separately by hangers, can be assembled in multiple

4>Our standard DMX&Power cable with 3M, (the cable connecting the lamp holder to the control box)

Suggestion: The longest connection distance can reach 12M.

5>High-efficiency optical system, Super beam effect plus zoom


3.Lux Date

Beam Angle = 3.5°

R lux	20600	1740	628	222
G lux	58800	5080	1810	668
B lux	10100	887	317	116
W lux	71100	6830	2440	897
4ln1 lux	157000	13600	4870	1800

Beam Angle = 45°

R lux	856	97	36	14
G lux	2550	291	107	43
B lux	470	54	20	8
W lux	3440	396	147	57
4ln1 lux	6870	786	291	113

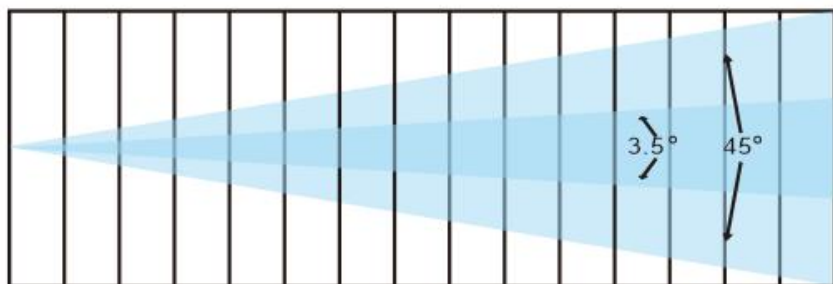

Distance (m)	1	3	5	8
Spot diameter (m) 3.5°	0.11	0.24	0.41	0.65
Spot diameter (m) 45°	0.60	1.72	2.77	4.50

4. How To Control The Unit



Menu

Up

Down

Enter

Display: Connection control box use

MENU To select the programming functions
DOWN To go backward in the selected functions
UP To go forward in the selected functions
ENTER To confirm the selected functions

Set DMX Address Code


- 1 Press **"Menu"** to "Set DMX Address", and press **"ENTER"** keys to enter into
- 2 Show "Set DMX Address DMX Address:001", Press the **"UP and DOWN"** keys to amended
- 3 Press **"ENTER"** keys to save and Exit, Press the **"MENU"** Keys does not save and Exit

	Mic Sense	001--100	Sound sensitivity adjustment
	Language	English	Select display language
		Chinese	
	Fan Set	Auto	Select fan speed
		Low	


Menu		High		
	No Signal	Black Out		Select the state when the luminaire has no signal
		Hold		
	Reset	Yes		Reset
		No		
	Default	Yes		Reset
		No		
	Adjust	Pass Word: ****		Change the value of Pan/Tilt/Focus to correct the angle; change the value of R/G/B/W to adjust the white balance.
		1.Red: 0--255		
		2.Greed: 0--255		
		3.Blue: 0--255		
		4.White : 0--255		
Address	001--512	Set the address code from 001--512		
Reverse	Display	1.YES	2.NO	Display font forward and reverse switching
Information	1.CH Value			Show all channel information
	2.Soft V.XXX			Program version number
Mode	DMX512			Set control mode
	Auto	1.Master		
		2.Alone		

Mode	Sound	1.Master	
		2.Alone	
	Manual 1.Master 2.Alone	1.Focus:0--255	Manual control
		2.Red: 0--255	
		3.Greed: 0--255	
		4.Blue: 0--255	
		5.White: 0--255	
		6.Strobe: 0-255	
Channel	1. 23Channels	23 CH	Select channel mode
	2. 28Channels	28CH	
	3. 42Channels	42CH	
	4. 50Channels	50CH	
	5. 56Channels	56CH	

5.Control Box information

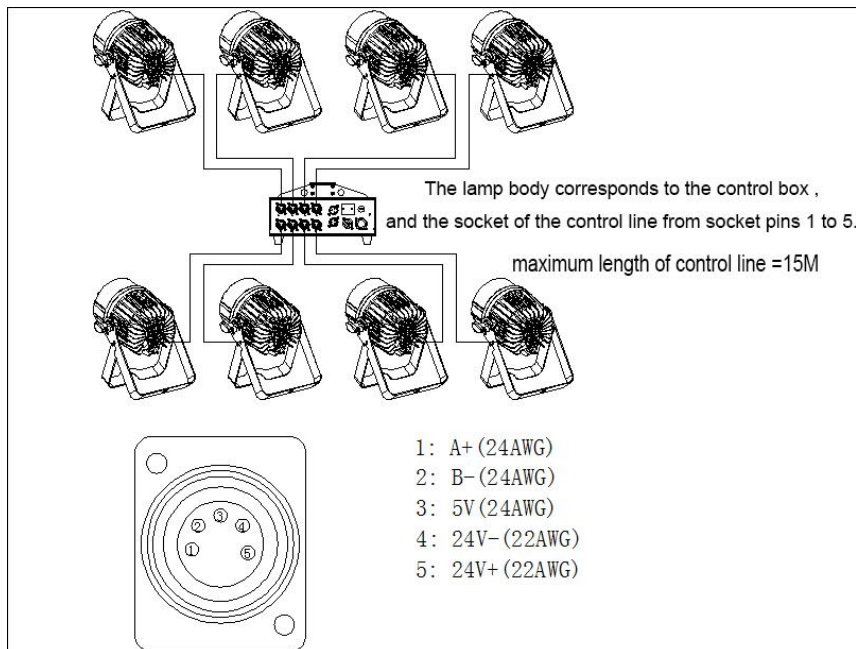

A set Z68 standard including:

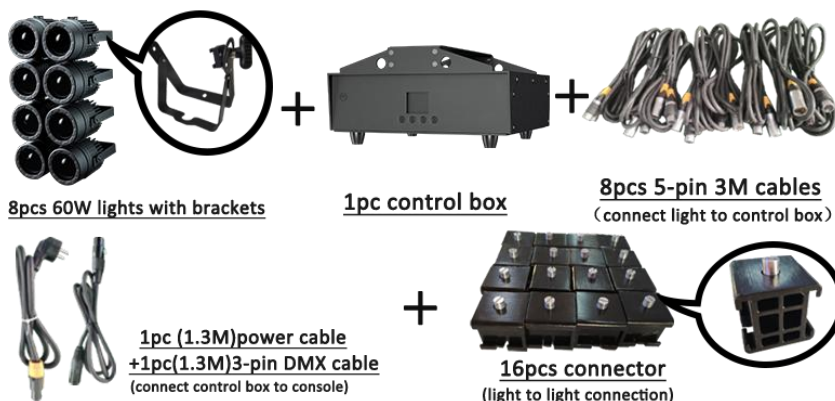

6.DMX Channel List

Model 1 - CH23

Channel	Function	DMX value	Description
CH -1	Focusing 1	0--255	Beam angle from small to large
CH -2	Focusing 2		
CH -3	Focusing 3		
CH -4	Focusing 4		
CH -5	Focusing 5		
CH -6	Focusing 6		
CH -7	Focusing 7		
CH -8	Focusing 8		
CH -9	Dimming	0--255	Linear dimming dark to light
CH -10	Strobe	0--3	Lighting
		4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
		204--255	Random strobe
CH -11	Red dimming	0--255	Linear dimming from dark to light
CH -12	Green dimming		
CH -13	Blue dimming		
CH -14	White dimming		
CH -15	Dimming mode	0--49	Mode 1
		50--99	Mode 2
		100--149	Mode 3
		150--255	Mode 4
CH -16	Color temperature	0--15	No effect
		16--35	R100%,G UP,B0%
		36--55	R DOWM,G100%,B0%

CH -16	Color temperature	56--75	R0%,G100%,B UP
		76--95	R0%,G DOWM,B100%
		96--115	R UP,G0%,B100%
		116--135	R100%,G0%,B DOWM
		136--155	R100%,G UP,B UP
		156--175	R DOWM,G DOWM,B100%
		176--195	R 100%,G 100%,B100%,W100% R 100%,G 100%,B100%,W100%
		196--200	2800K
		201--205	3200K
		206--210	3500K
		211--215	4000K
		216--220	4500K
		221--225	5000K
		226--230	5500K
		231--235	6000K
		236--240	6500K
CH -17	Macro color	241--245	7000K
		246--250	7500K
		251--255	8000K
		0--9	No effect
		10--19	Macro color 1
		20--29	Macro color 2
CH -18	Binary graphics	...(10 numbers)
		240--249	Macro color 23
		250--255	Macro color 24
CH -18	Binary graphics		Binary graphics selection

	selection	0--255	
CH -19	Pattern background R		Pattern effect red
CH -20	Pattern background G		Pattern effect green
CH -21	Pattern background B		Pattern effect blue
CH -22	Pattern background W		Pattern effect white
CH -23	Reset	0--250	No function
		251--255	Reset 5s is valid

Model 2 - CH28

Channel	Function	DMX value	Description
CH -1	Red	0--255	Red dimming
CH -2	Red trim		Red trim
CH -3	Green		Green dimming
CH -4	Green trim		Green trim
CH -5	Blue		Blue dimming
CH -6	Blue trim		Blue trim
CH -7	White		White dimming
CH -8	White trim		White trim
CH -9	Color temperature	0--15	No effect
		16--35	R100%,G UP,B0%
		36--55	R DOWM,G100%,B0%
		56--75	R0%,G100%,B UP
		76--95	R0%,G DOWM,B100%
		96--115	R UP,G0%,B100%
		116--135	R100%,G0%,B DOWM

CH -9	Color temperature	136--155	R100%,G UP,B UP
		156--175	R DOWM,G DOWM,B100%
		176--195	R 100%,G 100%,B100%,W100% R 100%,G 100%,B100%,W100%
		196--200	2800K
		201--205	3200K
		206--210	3500K
		211--215	4000K
		216--220	4500K
		221--225	5000K
		226--230	5500K
		231--235	6000K
		236--240	6500K
		241--245	7000K
		246--250	7500K
		251--255	8000K
CH -10	Macro color	0--9	No effect
		10--19	Macro color 1
		20--29	Macro color 2
		...(10 numbers)
		240--249	Macro color 23
		250--255	Macro color 24
CH -11	Strobe	0--3	Lighting
		4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
		204--255	Random strobe

CH -12	Dimming	0--255	Linear dimming dark to light
CH -13	Dimming fine tuning	0--255	Dimming fine-tuning control
CH -14	Dimming mode	0--49	Mode 1
		50--99	Mode 2
		100--149	Mode 3
		150--255	Mode 4
CH -15	Zoom	0--255	Zoom
CH -16	Pattern change (8 effects)	0--9	No effect
		10--14	Monochrome dynamic pattern 1
		15--19	Monochrome dynamic pattern 2
		...(5 numbers)
		80--84	Monochrome dynamic pattern 15
		85--89	Mixed color dynamic pattern 1
		90--94	Mixed color dynamic pattern 2
		...(5 numbers)
		115--119	Mixed color dynamic pattern 7
	Pattern change (5 effects)	120--124	Monochrome dynamic pattern 1
		125--129	Monochrome dynamic pattern 2
		...(5

CH -16	Pattern change (5effects)	numbers)	
		160--164	Monochrome dynamic pattern 9
		165--169	Mixed color dynamic pattern 1
		170--174	Mixed color dynamic pattern 2
		...(5 numbers)
		180--184	Mixed color dynamic pattern 4
	Random change	185--255	Random change
CH -17	Pattern effect speed	0--9	No effect
		10--132	Forward, from fast to slow (with 16 channels)
		133--255	Reverse, from slow to fast (with 16 channels)
CH -18	Pattern shift	0--255	Pattern translation (with 16 channels)
CH -19	Pattern effect fade		Pattern effect fade
CH -20	Pattern background R		Pattern effect red
CH -21	Pattern background G		Pattern effect green
CH -22	Pattern background B		Pattern effect blue
CH -23	Pattern background W		Pattern effect white
CH -24	Pattern dimming		Pattern 0-100% dimming

CH -25	Background dimming	0--255	Background dimming 0-100%
CH -26	Strobe in the foreground		Strobe in the foreground
CH -27	Background strobe		Background strobe
CH -28	Reset	0--250	No function
		251--255	Reset 5s is valid

Model 3 - CH42

Channel	Function	DMX value	Description
CH -1	Focusing 1	0--255	Beam angle from small to large
CH -2	Focusing 2		
CH -3	Focusing 3		
CH -4	Focusing 4		
CH -5	Focusing 5		
CH -6	Focusing 6		
CH -7	Focusing 7		
CH -8	Focusing 8		
CH -9	Dimming	0--255	Linear dimming dark to light
CH -10	Strobe	0--3	Lighting
		4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
		204--255	Random strobe
CH -11	Red dimming	0--255	Linear dimming from dark to light
CH -12	Green dimming		
CH -13	Blue dimming		
CH -14	White dimming		

CH -15	Dimming mode	0--49	Mode 1
		50--99	Mode 2
		100--149	Mode 3
		150--255	Mode 4
CH -16	Color temperature	0--15	No effect
		16--35	R100%,G UP,B0%
		36--55	R DOWM,G100%,B0%
		56--75	R0%,G100%,B UP
		76--95	R0%,G DOWM,B100%
		96--115	R UP,G0%,B100%
		116--135	R100%,G0%,B DOWM
		136--155	R100%,G UP,B UP
		156--175	R DOWM,G DOWM,B100%
		176--195	R 100%,G 100%,B100%,W100% R 100%,G 100%,B100%,W100%
		196--200	2800K
		201--205	3200K
		206--210	3500K
		211--215	4000K
		216--220	4500K
		221--225	5000K
		226--230	5500K
		231--235	6000K
		236--240	6500K
		241--245	7000K
		246--250	7500K
		251--255	8000K
CH -17	Macro color	0--9	No effect

CH -17	Macro color	10--19	Macro color 1
		20--29	Macro color 2
		...(10 numbers)
		240--249	Macro color 23
		250--255	Macro color 24
CH -18	R1LED dimming	0--255	R1LED dimming
CH -19	G1LED dimming		G1LED dimming
CH -20	B1LED dimming		B1LED dimming
CH -21	R2LED dimming		R1LED dimming
CH -22	R2LED dimming		G1LED dimming
CH -23	B2LED dimming		B1LED dimming
.....	0--255
CH -39	R8LED dimming	0--255	R12LED dimmer
CH -40	G8LED dimming		G12LED dimmer
CH -41	B8LED dimming		B12LED dimmer
CH -42	Reset	0--250	No function
		251--255	Reset 5s is valid

Model 4 - CH50

Channel	Function	DMX value	Description
CH -1	Focusing 1	0—255	Beam angle from small to large
CH -2	Focusing 2		
CH -3	Focusing 3		
CH -4	Focusing 4		
CH -5	Focusing 5		
CH -6	Focusing 6		

CH -7	Focusing 7		
CH -8	Focusing 8		
CH -9	Dimming	0--255	Linear dimming dark to light
CH -10	Strobe	0--3	Lighting
		4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
		204--255	Random strobe
CH -11	Red dimming	0--255	Linear dimming from dark to light
CH -12	Green dimming		
CH -13	Blue dimming		
CH -14	White dimming		
CH -15	Dimming mode	0--49	Mode 1
		50--99	Mode 2
		100--149	Mode 3
		150--255	Mode 4
CH -16	Color temperature	0--15	No effect
		16--35	R100%, G UP, B0%
		36--55	R DOWM, G100%, B0%
		56--75	R0%, G100%, B UP
		76--95	R0%, G DOWM, B100%
		96--115	R UP, G0%, B100%
		116--135	R100%, G0%, B DOWM
		136--155	R100%, G UP, B UP
		156--175	R DOWM, G DOWM, B 100%
		176--195	R 100%, G 100%, B100%, W100%
		196--200	2800K
		201--205	3200K

CH -16	Color temperature	206--210	3500K
		211--215	4000K
		216--220	4500K
		221--225	5000K
		226--230	5500K
		231--235	6000K
		236--240	6500K
		241--245	7000K
		246--250	7500K
		251--255	8000K
CH -17	Macro color	0--9	No effect
		10--19	Macro color 1
		20--29	Macro color 2
		...(10 numbers)
		240--249	Macro color 23
		250--255	Macro color 24
CH -18	R1LED dimming	0 -255	R1LED dimming
CH -19	G1LED dimming		G1LED dimming
CH -20	B1LED dimming		B1LED dimming
CH -21	W1LED dimming	0--255	W1LED dimming
.....
CH -46	R8LED dimming	0--255	R12LED dimmer
CH -47	G8LED dimming		G12LED dimmer
CH -48	B8LED dimming		B12LED dimmer
CH -49	W8LED dimming		W8LED dimming
CH -50	Reset	0--250	No function
		251--255	Reset 5s is valid

Model 5 - CH56


Channel	Function	DMX value	Description
CH -1	LED 1 Dimming	0--255	Linear dimming from dark to light
CH -2	LED 1 Strobe	0--3	Lighting
		4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
		204--255	Random strobe
CH -3	R1 LED Dimming	0--255	R1 LED Dimming
CH -4	G1 LED Dimming	0--255	G1 LED Dimming
CH -5	B1 LED Dimming	0--255	B1 LED Dimming
CH -6	W1 LED Dimming	0--255	W1 LED Dimming
CH -7	LED 1 Focusing	0--255	LED 1 Focusing
CH -8	LED 2 Dimming	0--255	LED 2 Dimming
CH -9	LED 2 Strobe	0--3	Lighting
		4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
		204--255	Random strobe
CH -10	R2 LED Dimming	0--255	R2 LED Dimming
CH -11	G2 LED Dimming	0--255	G2 LED Dimming
CH -12	B2 LED Dimming	0--255	B2 LED Dimming
CH -13	W2 LED Dimming	0--255	W2 LED Dimming
CH -14	LED 2 Focusing	0--255	LED 2 Focusing
CH -15	LED 3Dimming	0--255	LED 3 Dimming
CH -16	LED 3 Strobe	0--3	Lighting
		4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)


		204--255	Random strobe
CH -17	R3 LED Dimming	0--255	R3 LED Dimming
CH -18	G3 LED Dimming	0--255	G3 LED Dimming
CH -19	B3 LED Dimming	0--255	B3 LED Dimming
CH -20	W3 LED Dimming	0--255	W3 LED Dimming
CH -21	LED 3 Focusing	0--255	LED 3 Focusing
CH -22	LED 4 Dimming	0--255	LED 4 Dimming
CH -23	LED 4 Strobe	0--3	Lighting
		4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
		204--255	Random strobe
CH -24	R4 LED Dimming	0--255	R4 LED Dimming
CH -25	G4 LED Dimming	0--255	G4 LED Dimming
CH -26	B4 LED Dimming	0--255	B4 LED Dimming
CH -27	W4 LED Dimming	0--255	W4 LED Dimming
CH -28	LED 4 Focusing	0--255	LED 4 Focusing
CH -29	LED 5 Dimming	0--255	LED 5 Dimming
CH -30	LED 5 Strobe	0--3	Lighting
		4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
		204--255	Random strobe
CH -31	R5 LED Dimming	0--255	R5 LED Dimming
CH -32	G5 LED Dimming	0--255	G5 LED Dimming
CH -33	B5 LED Dimming	0--255	B5 LED Dimming
CH -34	W5 LED Dimming	0--255	W5 LED Dimming
CH -35	LED 5 Focusing	0--255	LED 5 Focusing

CH -36	LED 6 Dimming	0--255	LED 6 Dimming
CH -37	LED 6 Strobe	0--3	Lighting
		4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
		204--255	Random strobe
CH -38	R6 LED Dimming	0--255	R6 LED Dimming
CH -39	G6 LED Dimming	0--255	G6 LED Dimming
CH -40	B6 LED Dimming	0--255	B6 LED Dimming
CH -41	W6 LED Dimming	0--255	W6 LED Dimming
CH -42	LED 6 Focusing	0--255	LED 6 Focusing
CH -43	LED 7 Dimming	0--255	LED 7 Dimming
CH -44	LED 7 Strobe	0--3	Lighting
		4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
		204--255	Random strobe
CH -45	R7 LED Dimming	0--255	R7 LED Dimming
CH -46	G7 LED Dimming	0--255	G7 LED Dimming
CH -47	B7 LED Dimming	0--255	B7 LED Dimming
CH -48	W7 LED Dimming	0--255	W7 LED Dimming
CH -49	LED 7 Focusing	0--255	LED 7 Focusing
CH -50	LED 8 Dimming	0--255	LED 8 Dimming
CH -51	LED 8 Strobe	0--3	Lighting
		4--203	Synchronous strobe speed from slow to fast (1HZ-25HZ)
		204--255	Random strobe
CH -52	R8 LED Dimming	0--255	R8 LED Dimming

CH -53	G8 LED Dimming	0--255	G8 LED Dimming
CH -54	B8 LED Dimming	0--255	B8 LED Dimming
CH -55	W8 LED Dimming	0--255	W8 LED Dimming
CH -56	LED 8 Focusing	0--255	LED 8 Focusing

7.Shape

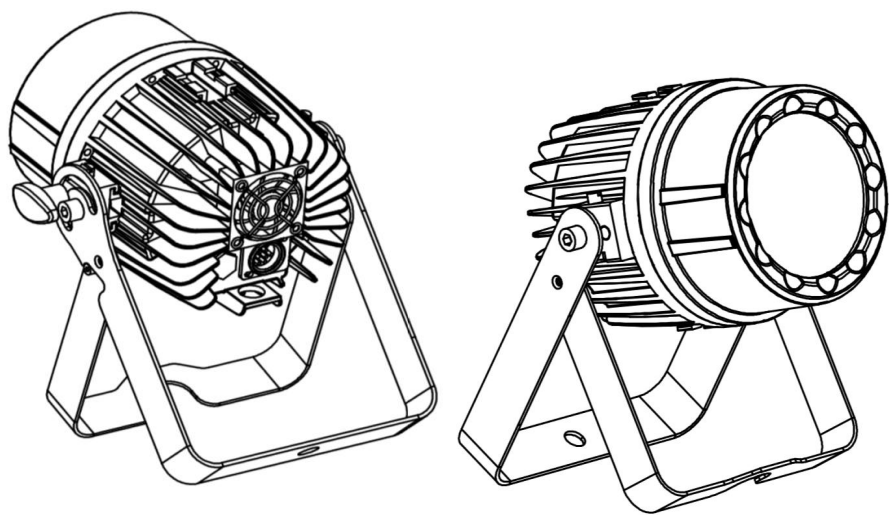

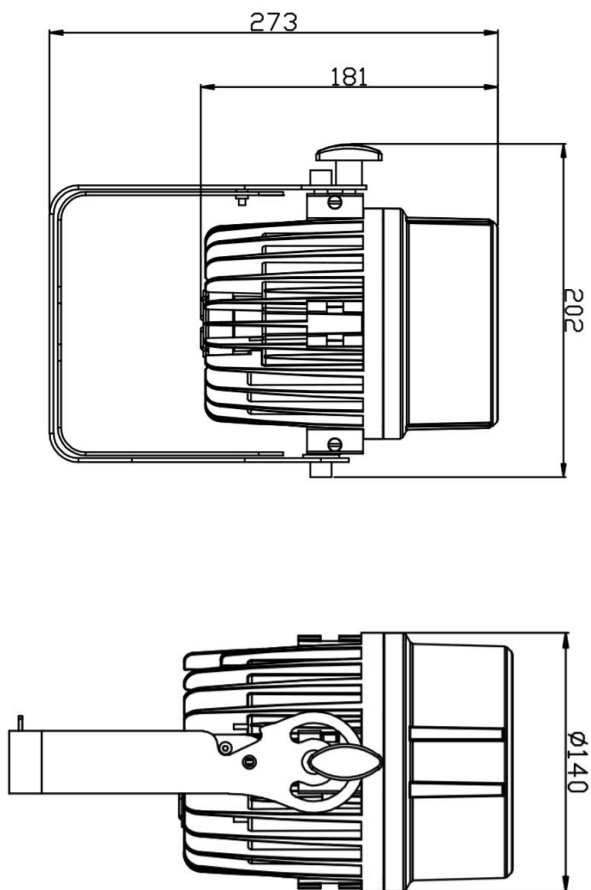

8. Trouble shooting

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

A. The unit does not work, no light and the fan does not work

1. Check the connection of power and main fuse.

2. Measure the mains voltage on the main connector.
3. Check the power on LED.

B. Not responding to DMX controller

1. DMX LED should be on. If not, check DMX connectors, cables to see if link properly.
2. If the DMX LED is on and no response to the channel, check the address settings and DMX polarity.
3. If you have intermittent DMX signal problems, check the pins on connectors or on PCB of the unit or the previous one.
4. Try to use another DMX controller.
5. Check if the DMX cables run near or run alongside to high voltage cables that may cause damage or interference to DMX interface circuit.

C. One of the channels is not working well

1. The stepper motor might be damaged or the cable connected to the PCB is broken.
2. The motor's drive IC on the PCB might be out of condition.

9. Fixture Cleaning

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics.

- **Clean with soft cloth using normal glass cleaning fluid.**
- **Always dry the parts carefully.**
- **Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.**