



User Manual

Beam+Spot+Wash 3-in-1 +LED Strip

Model: BSW 200

After-sales service

Please fill in the following content properly and keep it safe forfuture maintenance. Accordingly, for your each purchase of our systems we havearchive Serial number and parameters for future reference.

| Product warranty card | | |
|-----------------------|------------|----------------|
| Testing : | Warranty : | Non-warranty : |
| Mode: | | |
| Serial No. : | | |
| Distributor : | | |
| Address : | | |
| Tel : | | |

- 1. All device products purchased from our company (and authorized agents) are entitled to a one-year warranty service for light sources, machinery, and electronics if they are used correctly; if there is no warranty, the company can also provide paid maintenance services according to the actual situation;
- 2. The following situations are not covered by the free warranty:
- ① The product has no serial number:
- 2) The prohibition mark is damaged or there are obvious signs of self-disassembly;
- 3 The product has no replaceable components or components required by customized products, and unauthorized disassembly or replacement of components without permission leads to problems;
- ④ Failure or damage caused by improper use or improper maintenance or modification;
- (5) Damage caused by failure to operate in accordance with the instructions or the harsh environment of use:
- 6 Damage caused by impact during installation or handling by the purchaser;
- To repaired or replaced products, the warranty will not be extended, and the power will decay slowly according to the normal life span, which is not within the scope of free warrantv:
- ® Failure and damage caused by fire, earthquake, flood, lightning and other natural disasters or abnormal power supply voltage
- 3. The company reserves the right of final analysis of the above terms.

If there is a problem with the product, please contact the company (or agent) in time, and we will solve it in the shortest time. At the same time, we sincerely hope that you can provide valuable comments and suggestions on our products, and we will spare no effort to improve our products.

Contents

| Safety Guidance | P1 |
|--|-----|
| Technical Specifications | P2 |
| illumination / Introduction of the control panel | P3 |
| Color Wheel / Fixed Gobo Wheel / Rotating Gobo Wheel | P4 |
| Function Description | P5 |
| Channel value table | P8 |
| After-sales service | P11 |

The following symbols are used to identify important safety information in the product and user manual:



Warning: Risk of serious injury or death.



Warning: Refer to the user manual before installation, energizing, or servicing.



Warning: Risk of fatal or severe electric shock.



Warning: Potential risk: fire.



Warning: Hot surface, do not touch.



Warning: Potential risk protective



of eye injury, goggles must be worn.









Replace all broken protective covers.



objects.

Minimum Maximum distance to rated ambient illuminated temperature.



For indoor use only.




Do not point the lens at sunlight or strong light.



Do not manually adjust during operation.

Safety Guidance 🔨

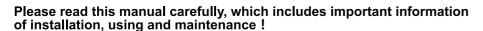

Warning: Please save this manual for future reference, and if you sell this product to other users, make sure they also get this manual.

Notice: The equipment is packed in good condition when it leaves the factory. Please operate it according to the user manual. Machine failure caused by human factors is not covered by the warranty.

- Before using the product, please check carefully to ensure that the light has no damage caused by transportation.
- This light is only suitable for use in dry places indoors.
- The installation and operation of lights should be performed by professionals.
- Do not allow children to operate the machine.
- Use safe ropes when securing the equipment, and lift up the bottom when moving the light.
- The equipment must be installed in a well-ventilated place, at least 50 cm away from adjacent surfaces.
- Make sure the ventilation holes are unobstructed to prevent the light from overheating during operation.
- Before operation, ensure that the power supply voltage matches the power supply voltage required by the equipment.
- Please ground the light to prevent electric shock.
- Do not operate the light in an environment above 40 °C.
- It is prohibited to connect light directly to dimming devices.
- A new light may produce a small amount of smoke or odor when it is working, which will disappear after 15 minutes of operation.
- Do not place flammable objects next to the light when it is in operation to prevent fire hazards.
- Before turning on the light, please carefully check whether the power cord is damaged. If damaged, please replace it immediately.
- \bullet When the light is in operation, the surface temperature of the shell can reach 70 $^{\circ}\text{C}$, please do not touch it with bare hands.
- Prevent flammable liquids, water or metal and other conductive objects from entering the light to avoid electric shock or fire. If any foreign object enters the light, please cut off the power supply immediately.
- Avoid operating in dirty and dusty environments, and clean and maintain the lights regularly.
- Do not touch the wires when the light is running to prevent electric shock.
- Avoid the power cord from getting entangled with other wires.
- The distance between the light and the irradiated surface should be greater than 1 meter.
- Disconnect the power supply before replacing the fuse or bulb.
- When replacing a fuse or bulb, use the same type.
- If a serious operating failure occurs, please stop using it immediately.


| 11 | Gobo Rotation | |
|----|------------------|--------------------------------|
| | 0-4 | Static |
| | 5-127 | Forward Rotation, Fast to Slow |
| | 128-255 | Reverse Rotation, Slow to Fast |
| 12 | Prism | |
| | 0-127 | OFF |
| | 128-255 | ON |
| 13 | Prism Rotation | |
| | 0-4 | Static |
| | 5-127 | Forward Rotation, Fast to Slow |
| | 128-255 | Reverse Rotation, Slow to Fast |
| 14 | Frost | |
| | 0-127 | OFF |
| | 128-255 | ON |
| 15 | Focus 1 | 0-255 |
| 16 | Focus 2 | 0-255 |
| 17 | Auto Mode | |
| | 0-9 | Other Channel Functions |
| | 10-239 | Fast Auto Mode |
| | 240-255 | Sound Control Mode |
| 18 | Reset | 250-255 (5s) |
| 19 | LED Strip Effect | 0-255 |
| 20 | LED Strip Speed | 0-255 Slow to Fast |
| | | |


| 9 | Gobo Wheel | 0-255 |
|----|---------------|--------------------------------|
| | 0-7 | Gobo 1 |
| | 8-15 | Gobo 2 |
| | 16-23 | Gobo3 |
| | 24-31 | Gobo4 |
| | 32-39 | Gobo5 |
| | 40-47 | Gobo6 |
| | 48-55 | Gobo7 |
| | 56-63 | Gobo8 |
| | 64-71 | Gobo 8 shake |
| | 72-79 | Gobo 7 shake |
| | 80-87 | Gobo 6 shake |
| | 88-95 | Gobo 5 shake |
| | 96-103 | Gobo 4 shake |
| | 104-111 | Gobo 3 shake |
| | 112-119 | Gobo 2 shake |
| | 120-187 | Forward Rotation, Fast to Slow |
| | 188-255 | Reverse Rotation, Slow to Fast |
| 10 | Rotating Gobo | |
| | 0-7 | Large Circle |
| | 8-15 | Rotating Gobo 1 |
| | 16-23 | Rotating Gobo 2 |
| | 24-31 | Rotating Gobo 3 |
| | 32-39 | Rotating Gobo 4 |
| | 40-47 | Rotating Gobo 5 |
| | 48-55 | Rotating Gobo 6 |
| | 56-63 | Rotating Gobo 7 |
| | 64-71 | Rotating Gobo 7 shake |
| | 72-79 | Rotating Gobo 6 shake |
| | 80-87 | Rotating Gobo 5 shake |
| | 88-95 | Rotating Gobo4 shake |
| | 96-103 | Rotating Gobo 3 shake |
| | 104-111 | Rotating Gobo 2shake |
| | 112-119 | Rotating Gobo 1 shake |
| | 120-187 | Forward Rotation, Fast to Slow |
| | 188-255 | Reverse Rotation, Slow to Fast |

- If there is obvious damage to the light housing, lens or UV filter, please replace it in time
- There are no usable parts inside the light, please do not open the light casing without authorization
- Please do not operate the machine by yourself. Non-professional operation may cause damage to the equipment or malfunction. If maintenance is required, please contact the nearest authorized service center.
- Please cut off the power supply when the light is not used for a long time or is under maintenance.
- When transporting again, please use the original packaging materials.
- To avoid fire or electric shock, do not expose the light to rain or wet areas.
- Do not look directly at the light when it is running .
- When hanging the light sideways or hanging it, please correctly install the safety rope.

Technical Specifications

| Voltage | AC100V-240V 50-60HZ |
|---------------|--------------------------------------|
| Rated Power | 240W |
| Light Source | 1x150W White LED + 24x0.2W RGB LED |
| Beam Angle | 7°~21° |
| Control Mode | DMX512 / Auto / Sound / Master-slave |
| Color | 7+White |
| Fixed Gobo | 7+White |
| Rotating Gobo | 7+White |
| Prism plate | 3 Prism |
| DMX Channels | 20CH |
| Pan | 540° |
| Tilt | 180° |
| Dimmer | 0-100% Linear dimmer |
| N.W. | 6.5Kg |

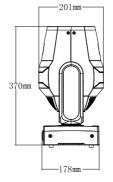


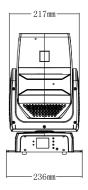


illumination



Introduction of the control panel

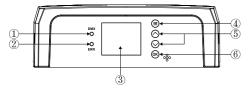

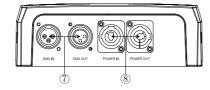

①Signal indicator:

Green color shows DMX signal is connected.

②Error indicator:

Red color shows there is ERROR message, check it from the "Information" menu

- ③LCD Display
- 4 Enter to Main menu/Return
- ⑤Detail UP/Down
- **6**Enter
- ⑦DMX IN & DMX OUT:

For DMX512 operation, use 3-pin XLR cable to link the unit and DMX controller (5-pin XLR is optional)


®POWER IN/OUT: Use to connect to supply power

Channel value table


| 20CH | Function | Description |
|------|----------------|--------------------------------|
| 1 | Pan Movement | 0-255 |
| 2 | Pan Fine | 0-255 |
| 3 | Tilt | 0-255 |
| 4 | Tilt Fine | 0-255 |
| 5 | Pan/Tilt Speed | 0-255 |
| 6 | Dimmer | 0-255 |
| 7 | Strobe | |
| | 0 | Off |
| | 1-255 | Slow → Fast |
| 8 | Color Wheel | 0-255 |
| | 0-7 | Color 1 |
| | 8-15 | Color 2 |
| | 16-23 | Color 3 |
| | 24-31 | Color 4 |
| | 32-39 | Color 5 |
| | 40-47 | Color 6 |
| | 48-55 | Color 7 |
| | 56-63 | Color 8 |
| | 64-71 | Color 1+Color 2 |
| | 72-79 | Color 2+Color 3 |
| | 80-87 | Color 3+Color 4 |
| | 88-95 | Color 4+Color 5 |
| | 96-103 | Color 5+Color 6 |
| | 104-111 | Color 6+Color 7 |
| | 112-119 | Color 7+Color 8 |
| | 120-127 | Color 8+Color 1 |
| | 128-191 | Forward Rotation, Fast to Slow |
| | 192-255 | Reverse Rotation, Slow to Fast |

| | | 1 |
|---------------|---------------------|--------------------|
| Advanced Menu | Sensor Monitoring | Pan Ha ll |
| | | Tilt Hall |
| | | Color Wheel Hall |
| | | Gobo Wheel Hall |
| | | Focus 1 Hall |
| | | Focus 2 Hall |
| | | Rotating Gobo Hall |
| | Reset Calibration | Pan |
| | | Tilt |
| | | Color Wheel |
| | | Gobo Wheel |
| | | Focus 1 Hall |
| | | Focus 2 Hall |
| | | Prism |
| | | Frost |
| | | Rotating Gobo |
| | LED Max Power | 001-255 |
| | Max LED Temperature | 50-80 |
| | Prism Travel Range | 80-180 |


Color Wheel

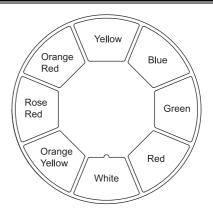

Fixed Gobo Wheel

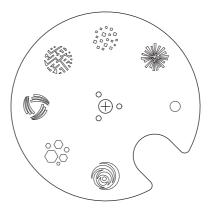

Rotating Gobo Wheel

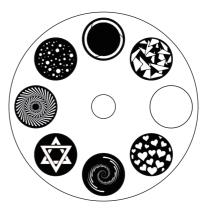

Function Description

| Main Menu | Setup | Parameter settings |
|----------------|--------------------------|-----------------------------------|
| | Manual | Manual operation mode |
| | System | Status monitoring, display |
| | Advanced | Advanced parameter configuration |
| | Language | Chinese / English switch |
| | Temperature | LED temperature display |
| | Display Inversion | Normal / Reverse display |
| | Reset | Device reset |
| | DMX/RDM | DMX / RDM signal indicator |
| Setup Menu | Operating Mode | DMX, Auto, Random, Sound |
| | DMX Address | 001–512 |
| | Channel Mode | Standard 20CH |
| | Sound Sensitivity | 0–100 |
| | Pan Inverse | ON / OFF |
| | Tilt Inverse | ON / OFF |
| | Pan-Tilt Swap | ON / OFF |
| | Pan-Tilt Encoder | ON / OFF |
| | No DMX Signal | Hold / Blackout |
| | Display Time | Always On / 10s / 20s / 40s / 60s |
| | Display Brightness | 20% / 40% / 60% / 80% / 100% |
| | Restore Default Settings | Confirm / Cancel |
| Manual Control | Pan (X) | 0-255 |
| | Pan Fine | 0-255 |
| | Tilt (Y) | 0-255 |
| | Tilt Fine | 0-255 |
| | Pan-Tilt Speed | 0-255 |
| | Dimmer | 0-255 |
| | Strobe | 0-255 |
| | Color Wheel | 0-255 |
| | Gobo Wheel | 0-255 |
| | Rotating Gobo | 0-255 |
| | Gobo Rotation | 0-255 |
| | Prism | 0-255 |
| | Prism Rotation | 0-255 |
| | Frost | 0-255 |
| | Focus 1 | 0-255 |
| | Focus 2 | 0-255 |

| | Reset LED Strip Effect LED Strip Speed DMX Channel | 0-255 0-255 0-255 |
|-------------|---|-------------------------|
| | LED Strip Speed | |
| | · · · · · · · · · · · · · · · · · · · | 0-255 |
| System Menu | DMX Channel | |
| -, | | Pan |
| | Value Monitoring | Pan Fine |
| | | Tilt |
| | | Tilt Fine |
| | | Pan&Tilt Speed |
| | | Dimmer |
| | | Strobe |
| | | Color Wheel |
| | | Gobo Wheel |
| | | Rotating Gobo |
| | | Gobo Rotation |
| | | Prism |
| | | Prism Rotation |
| | | Frost |
| | | Focus 1 |
| | | Focus 2 |
| | | Auto |
| | | Reset |
| | | LED Strip |
| | | LED Strip Speed |
| | System Error Record | Error Records |
| | LED Temperature | Temperature Display |
| | Device Usage Time | Usage Time |
| | This lighting time | Lighting time |
| | DIS | version number |
| | MT | version number |