

Battery LED Lighting Mast

User Manual



This manual contains important information.
Please read before operating fixture.

1. SECURITY TIPS

WARNING!!! To reduce the risk of fire, electric shock, or injury to persons, follow these important safety instructions:

- non-professionals, not to disassemble the light arbitrarily and lighting accessories inside.
- rated voltage range: AC110V-120V/60Hz or AC200V-240V / 50HZ (to be selected).
- not beam irradiate the flammable materials, flammable materials and the lamp should be maintained at least 1M over the distance.
- lamps used in ambient temperature: -15 °C -40 °C , the highest temperature of the surface of the lamp: 60 °C.
- to keep away from the liquid substance and humid environment.
- before using the lights must ensure the good grounding, can not install charging and remove any parts.
- the installation of lamps, must be fixed screw fasteners with additional security cable and regular inspection.
- lamps consecutive working hours is not recommended more than 10 hours.
- should stop using the lights in time when happens unusual conditions during the process
- lamp parts of the rotation, external accessories and paste parts should be regular inspected, such as the emergence of loose and rock, should be reinforced in a timely manner to prevent the accident.
- lamps adopt strong winds to refrigerate, it is easy to accumulate the dust, so you have to clean it weekly especially the cooling air opening, otherwise the dust will plug leading to poor light

2 TECHNOLOGY REFERENCE

Power Supply: AC 100-240V/50-60Hz

Power consumption: 90W

Light source: 9pcs LED RGBWA+UV 6in1 mixing color

Beam Angle: 25°

Dimmer: 0-100% dimmer

Strobe rate: 0-24HZ

Working Environment: -20℃-40℃

IP rate: IP20, indoor

DMX Channels: 2 DMX modes, 6 channels mode & 10 channels mode

Control Mode: DMX512, Master-slave, Sound, Auto, Wireless, Wifi, Remote

Battery:

Battery type: Lithium Ion

Battery Charge Time: 6 hours (full power)

Battery Life: (all on) 4 hours, (single Color) 24 hours

Battery Power: 12V, 25Ah

Wireless effective distance: 400 meters


Net weight: 11kg

Production function:

- DMX512 console control, which can be controlled online through 2.4G wireless mode.
- The master and slave can be controlled online through 2.4G wireless mode.
- Mobile WiFi operation control, support Android 2.3 and above, Apple iOS 4.3 and above (this function is applicable to WiFi motherboards).
- Mobile APP name: **LED LAMP**, Language: The software automatically recognizes Chinese or English according to the system.
- Static color selection (6 colors, dimming value 0-255) + strobe function (speed adjustable 0-20).

- Macro color: 16 colors to choose.
- Automatic color jump function (speed adjustable 1-20)
- Color gradient function (speed adjustable 1-20)
- Color Sudden function (speed adjustable 1-20)
- Strobe with red background, strobe with green background, strobe with blue background, strobe with amber background (speed adjustable 0-20), strobe with UV background (speed adjustable 0-20)
- 2.4G wireless electronic switch, you can turn on or off the 2.4G wireless power through the menu. You can know whether to turn on or off the wireless module through the icon in the upper left corner of the interface. The wireless transceiver frequency can be selected through the menu
- White balance setting, adjust the brightness of the 6 colors appropriately (also has the function of fine-tuning the current), the value is (127-255)
- The battery icon in the upper right corner of the interface can be turned on or off by setting. For products without battery, it can be set to off
- Screen saver settings: can be set to normally open or automatically turn off the display backlight after 5 seconds, 10 seconds, 15 seconds
- Infrared remote control function setting: can be turned on or off through the menu setting

3 Board Instruction

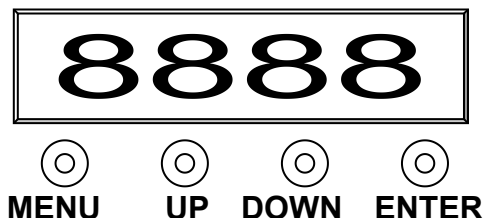

Operate Menu

Menu	Item1	Item2	Item3
"Choose Pattern"	"Static"	(Color)	(Dimming)
		RED	0-255
		GREEN	0-255
		BLUE	0-255
		WHITE	0-255
		AMBER	0-255
		PURPLE	0-255
		STROBE	0-20
	"Macro"	1-32	
			(Speed)
	"Show"	"AUTO"	0-20
		"FADE"	0-20
		"SNAP"	0-20
		"R-STRO"	0-20
		"G-STRO"	0-20
		"B-STRO"	0-20
		"A-STRO"	0-20
			(Sensitivity)
	"Sound"	"SOUND1"	0-100
		"SOUND2"	0-100
		"SOUND3"	0-100
		(Options)	
"User Settings"	" Channel"	006/010	
		(Addressed)	
	" DMX512"	001-512	
		(Mode)	
	" Slave"	OK	

	" WiFi"	WiFi Icon	
"System Settings"	"1.white Balance"	(Color)	(Brightness)
		RED	127-255
		GREEN	127-255
		BLUE	127-255
		WHITE	127-255
		AMBER	127-255
		PURPLE	127-255
	"2.Show Battery Icon"	YES/NO	
	"3.Display Sleep"	Open/5Sec/10Sec/15Sec	
	"4.Autolock"	YES/NO	
	"5.FAN Control"	Auto/High/Medium/Low	
	"6.Infrared Setting"	ON/OFF	Remote control
	"7.Wireless Setting"	ON/OFF	
	"8.Factory Reset"	Password[----]	
"Informations"	"1.LED"	(Temperature)	0-99℃
	"2.WORK"	(Hours)	001-999
	"3.SOFT"	(Version)	xxx
	"4.LEVEL"	(Percent)	10-100

3.1 Control Interface



1. 3 inch Oled display: display menu functions and parameters;

2.Button definition

MENU	Main menu function selection/exit submenu
▲ UP	Select the previous menu/parameter increment
▼ DOWN	Select the next menu/parameter decreasing
ENTER	Recognize the selected function / enter the next menu

3.2 Method of operation

Switch machine operation:

When the power is off, press and hold the MENU button, after 3 seconds, the display will light up and be in the power-on state, and you can perform the required function operations.

When the power is on, press and hold the MENU button, after 3 seconds, the display will turn off and the power will be cut off.

"Choose Pattern" selection pattern

Select "Choose Pattern" and press the ENTER button to confirm. The display will show the corresponding function menu. Such as static color, macro function color mixing, performance mode, voice control mode. Use the UP/DOWN button to select among the functions. If you press the ENTER button, the display will enter the next menu item, and if you press the Menu button, you will exit to the previous menu mode. The parameters will be automatically saved after selection.

"User Settings" user settings

Select "User Settings" (user console mode setting), press the ENTER button to confirm, the display will enter the channel options, use the

UP/DOWN button to select "6Ch" (6 channel mode), "10Ch" (10CH channel mode) , When you press the ENTER button again, the menu will automatically jump to the "DMX512" address setting mode. With the UP/DOWN button, you can adjust the address code you need to set between 1 and 512. After you select it, the parameters will be automatically saved. If you press the ENTER key again, it will return to the main interface. When DMX512 signal is received, the interface will display "Connection" prompt. If the DMX512 signal is disconnected, the interface will display "Disconnect" prompt. If you press the ENTER or MENU button, the display will exit to the previous menu mode.

"Slave" slave mode

Select "Slave" (slave mode), press the ENTER button to confirm, "Slave Model!" will be displayed. Indicates that it has entered the slave receiving mode state. After selection, the parameters will be automatically saved. When the host signal is received, the interface will display "Connection" prompt, if the host signal is disconnected, the interface will display "Disconnect" prompt, if you press ENTER Or press the MENU button, the display will exit to the previous menu mode.

"System Settings" system settings mode

Select "System Settings" (system settings mode), press the ENTER button to enter the next menu, use the UP/DOWN button to select different settings among the setting functions, press the ENTER or MENU button, the display will exit to the previous Level menu mode.

3.3 DMX512 console control mode

In the "User Settings" interface, press the ENTER button to confirm. "Channel" (channel mode) is displayed on the screen, use the UP/DOWN button to select "6Ch" (6 channel mode) or "10Ch" (10CH channel mode) as needed, press the ENTER button to automatically jump to "DMX512" (DMX512 address) Code setting), use the UP/DOWN button to adjust the address code you need to set between 1 and 512, and then you can receive

the DMX512 console control signal.

If you want to use this function, please refer to the following diagram to set the DMX512 addresses of the first 4 fixtures:

6CH mode: 1: A001, 2: A007, 3: A015, 4: A022

10CH mode: 1: A001, 2: A011, 3: A023, 4: A035

3.4 Master and Slave machine built-in program control

When multiple fixtures are connected in the main and auxiliary mode, except for the first one, select "Slave" (slave mode) for the other lamps behind, press the ENTER button to confirm, and "OK!" will be displayed. Indicates that it has entered the slave receiving mode state. After selection, the parameters will be automatically saved. When the host signal is received, the interface will display a "Connection" prompt. If the DMX512 signal is disconnected, the interface will display a "Disconnect" prompt. If you press ENTER Or press the MENU button, the display will exit to the previous menu mode. The first light fixture is used as the host, and all performance modes can be selected, and the auxiliary unit will be controlled by the host to perform the same actions.

3.5 WIFI Operation mode

In the "User Settings" interface, press the ENTER button, use the UP/DOWN button to select "WiFi Mode" (WIFI mode), press the ENTER button, the WiFi icon will appear, indicating that the WiFi module has been turned on, and you can use your mobile phone at this time Set up for connection control. Open the phone settings function, find the wireless and

network WLAN items, connect the device with the name of LED_xxx, as shown in the figure



When the connection is successful, exit the mobile phone function settings and open the “Led LAMP” application software, then the corresponding mode operation can be carried out. App interface and mobile phone operating system may be different.

4 DMX CHANNEL SHEET

6CH mode

CH	Value	Function
1	0-255	Red from darkness to brightness
2	0-255	Green from darkness to brightness

3	0-255	Blue from darkness to brightness
4	0-255	White from darkness to brightness
5	0-255	Amber from darkness to brightness
6	0-255	Purple from darkness to brightness

10CH mode

CH	Value	Function
1	0-255	Total dimmer ,CH9(0~9)
2	0-9	Strobe close
	10-255	Strobe open, from slow to fast
3	0-255	Red from darkness to brightness
4	0-255	Green from darkness to brightness
5	0-255	Blue from darkness to brightness
6	0-255	White from darkness to brightness
7	0-255	Amber from darkness to brightness
8	0-255	Purple from darkness to brightness
9	0-9	Dimmer mode
	10-29	Choose color: CH10 choose color
	30-49	Jump change: CH10 control speed
	50-69	Gradual change: CH10 control speed
	70-89	Pulse change: CH10 control speed
	90-109	Red On + Strobe: CH10 control speed
	110-129	Green On + Strobe: CH10 control speed
	130-149	Blue On + Strobe: CH10 control speed
	150-169	Amber On + Strobe: CH10 control speed
	170-189	Purple On + Strobe: CH10 control speed
	190-209	Sound Jump change
	210-229	Sound Jump change + Gradual change
	230-255	Sound Strobe
10	0-255	CH10 function decided by CH9 When CH9 on 10-29, CH10 will choose

		When CH9 on 30-189, CH10 will control speed, from slow to fast
--	--	--

5 FIXED EQUIPMENT

Please fasten the fixture clamp before hanging. The clamp can be fasten by the little hole in the middle of the bracket, then tie with a safety belt. The loading capacity of the safety belt should be 10 times than the weight of the fixture itself.

6 CONNECTION OF DMX-512 AND CONNETION WITH THE LIGHT EQUIPMENT

Please connect XLR-XLR control wire with every light from the output of DMX.


XLR connection :

DMX-OUTPUT




Pin 1: Screen
Pin 2: Signal -
Pin 3: Signal +

DMX-INTPUT

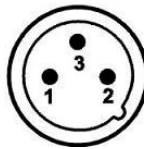

Pin 1: Screen
Pin 2: Signal -
Pin 3: Signal +

ATTENTION: Please do remember to connect one circle circuit plug on the output signal of last equipment. And this circle circuit plug was connected a 120ohm resistance between terminals 2 and 3 of the CANON plug, connect this circle circuit plug can avoid the signal flash phenomena of signal DMX512 during the transmission.

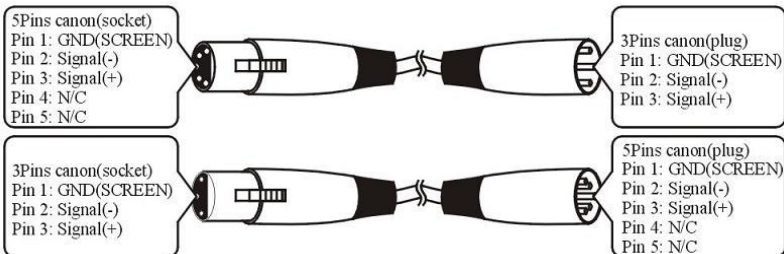

7 Maintenance

Problems	Check list	Trouble Shooting
The fixture do not work	1. If your power as same as the input of the machine. 2. If the fuse was broken.	1. Make sure the voltage. 2. Replace the same fuse.
LED dimmed	If your power us same as the input of the machine	Make sure the voltage input.
No DMX input	1. If the polarity is opposited in the DMX controller. 2. If it is in DMX mode. 3. If there are 2 Master in a loop.	1. Correct the DMX polarity. 2. Change to the DMX mode. 3. Set one piece into Slave mode.
Par Light Set works abnormality	1. Check if the serial is correct on the Par Light display	1. Set the right serial No on the single Par Light

8 AFTER SERVICE

1. Our company offer technical consultation to customers for ever.
2. If the machine is wrong and need repairmen, please truthfully fill in the related content and feedback us the problems timely, as well as we have to improve the product.
3. In addition to the lamp, also matching accessories are as follows:
accessories: Power line 1 piece **Optional parts:** (customers)



Warranty Card

Name	Model
------	-------

Production	Purchase
------------	----------

End User
Company Name:
Add:

Sale Store	
Link man:	
Tel:	Stamp

Description: These must be truthfully fill, seal by the end-user and point-of-sale, or else the warranty will not work (warranty period and terms, see the following)

warranty period: one year since purchase warranty terms: 1、 If fail when using the product in normal state, you can made under the provisions of the warranty, show the warranty card and purchase bills(copy), and enjoy free maintenance service in a specific service center or the manufacturer.

2. The following will be the implementation of paid service:

- (1)Without the effective warranty card
- (2)There's blank, alter and no point-of-sale name
- (3)Fail caused by unresistance
- (4)Fail caused by transportation or unloading
- (5)Fail caused by not operate by manual
- (6)Fail caused by disassemble without unauthorized
- (7)Fail caused by using the unauthorized control system

Note:

Based on our company continue to improve the product, the statement containing data may have changed, and will not notice the change any more. Company retains its right to change specifications related when product is improved. Thanks for your understanding.